
Barbarian Basketball Systems Inc. Titanium Series

ADJUSTABLE BASKETBALL SYSTEM
ASSEMBLY INSTRUCTIONS AND OWNER'S MANUAL

Model - GC-5x54



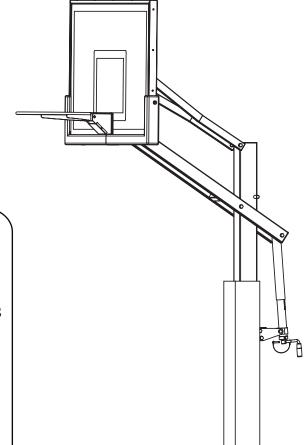


WARNING



FAILURE TO COMPLY WITH ANY OF THE WARNINGS IN THESE INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY.

FAILURE TO COMPLY MAY ALSO RESULT IN PROPERTY DAMAGE. PLEASE HEED ALL WARNINGS AND CAUTIONS TO ENSURE YOUR SAFETY.

DO NOT ATTEMPT TO ASSEMBLE THIS SYSTEM WITHOUT CAREFULLY READING AND FOLLOWING ALL INSTRUCTIONS. BEGIN BY IDENTIFYING AND TAKING INVENTORY OF ALL PARTS USING THE PARTS LIST PROVIDED.



SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE.

FAILURE TO DO THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe

and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system following the instructions carefully. Proper and complete assembly, use To ensure safety, do not attempt to assemble this system without s not installed, maintained, and operated properly. operation of the system.

- If use a ladder during assembly, use extreme caution.
- 4 people are recommended for this operation.
- Seat the pole sections properly (if applicable). Failure to do so could allow the pole sections to separate during play.
- Before digging, contact utility company to locate underground power cables, gas and water lines. Ensure there are no overhead power lines within 20 ft. (7m) radius of pole location.
- Climate, corrosion or misuse could result in system failure.
- If technical assistance is required, contact us:


♠ WARNING

FAILURE TO DO THESE WARNINGS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE. Owner must ensure that all players know and follow these rules for safe operation of the system.

- Only hang from the rim briefly to regain balance or avoid injuring others. Release the rim as soon as possible safely.
- During play, especially when performing dunk type activities, keep palyer's face away from the backboard, and net. Serious injury could occur if teeth/face come in contact with backboard rim or net
 - backboard, rim, or net.

 Do not slide, climb, or play on pole.
- When adjusting height, keep hands and fingers away from moving parts.
- Do not allow children to adjust system.
 During play, do not wear jewelry (rings, watches, necklaces, ets.) Objects may
 - entangle in net.

 Keep water and organic material away from pole. Pole can rust and fail.
- Check pole and all metal parts regularly for rust. completely remove rust and repaint with exterior enamel. if rust has penetrated any steel parts, replace that part immediately.
 - Check system before each use for loose hardware, signs of rust and instability. Repair before each use.
 - Wear a mouthguard when playing to avoid dental injuries.

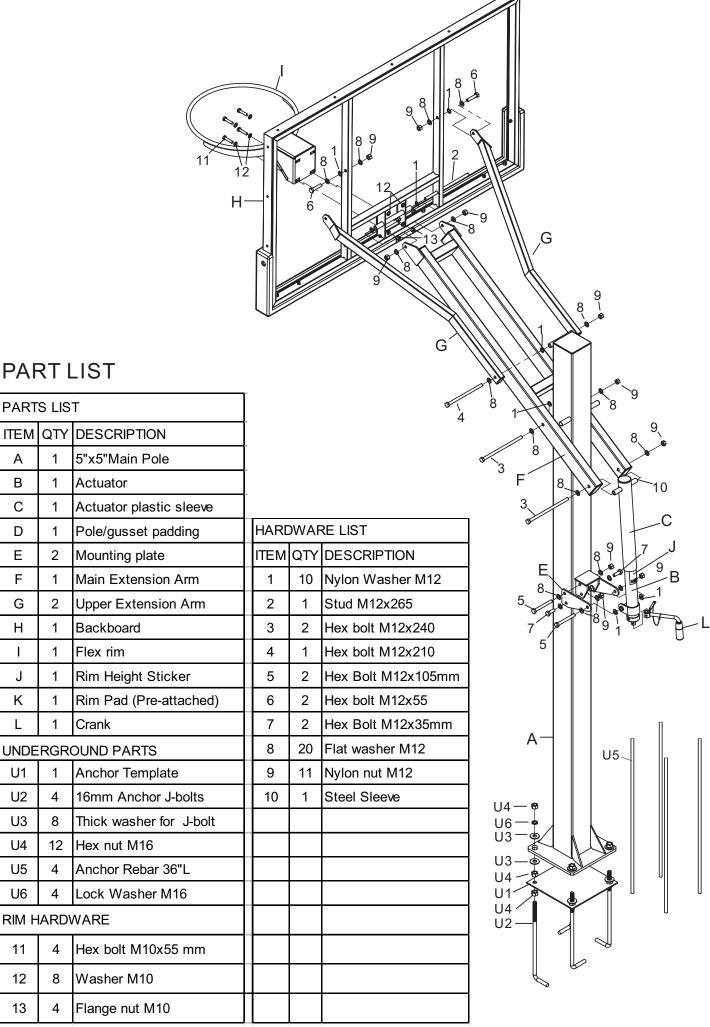

INSTALLATION (Day 1 to Day 4)

Prior to anchor system and goal assembly, call utility services for location of underground utility lines before you dig.

This assembly needs 5 days totally.

Day 1: Anchor system installation.

Day 2-4: Allow concrete to cure.

Day 5: Complete basketball system installation.

THREE PEOPLE ARE NEEDED TO ASSEMBLE THIS UNIT

Tools and materials required for assembly

- 1. Two Adjustable Wrenches
- 2. 1-1/8" Wrench
- 3. 9/16" Wrench
- 4. 3/4" Wrench
- 5. 11/16" wrench
- 6. 1" Wrench
- 7. Hammer or Mallet

- 8. Concrete 12 Bags (80lbs/bag).
- 9. Electric Drill
- 10. Carpenter's Level
- 11. A minimum of two Ladders
- 12. Water Supply
- 13. Tape measure
- 14. Shovel

Figure2

Day 1

Anchor system installation

1. Locate your system close to or on the court. Dig a hole as shown in figure 1. Bell out the bottom.

Assemble anchor system as shown in fugure 2: Thread nut M16 (U4) all the way to bottom of threads on J-bolt (U2) insert threads of J-bolt (U2) through hole on anchor plate (U1) and secure with nut (U4).


Note: Each leg of anchor bolts should face the anchor bolt to the right. See Figure 2.

- 2. Mix and pour concrete into hole. follow instructions on concrete bag. Stop about 8" below playing surface.
- Insert 4 Rebars (U5) into concrete 8" apart making a square in center on hole.
- **4.** Continue to pour concrete into hole. Use a concrete form or wooden form for top 4", until concrete flush with playing surface.
- 5. Push anchor system into concrete and agitate to eliminate voids in concrete, level and square anchor plate (U1) to playing surface. Clean off any concrete on anchor plate and exposed threads.

You are finished with anchor system. Allow concrete cure a minimum of 72hrs.

WARNING

Before digging hole for anchor system, check for buried power, gas, water, and telecommunication lines! Failure to do so could result in serious or fatal injury! Contact your local utility company if unsure.

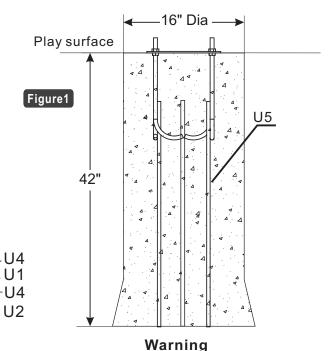

Never continue to assemble your system without following cementing instructions. Failure to do so may cause serious personal injury or property damage.

INSTALLATION (Day5)

A hammer or mallet may be needed during assembly.


1. Place the Pole on the Anchor system. Slide one Thick washer M16 (U3) over each J-bolt (U2). Lift the Pole (A) onto

Anchor system, secure with one thick washer (U3), one Lock washer M16 (U6) and one Hex nut (U4) for each J-bolt.

See Figure 4.


If the Main Post (A) is not exactly vertical, adjust the 16mm J-Bolt Hex Nuts (U4) located under the Post base (A). Tighten all of the Hex Nuts (U4) Above Post base when Main Post (A) is vertical.

NOTE: Face the Main Post (A) with Actuator Bracket facing away from playing court (as shown in FIGURE 5).

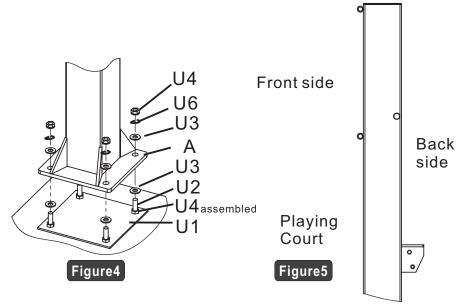


2. Attach Actuator mounting plate (E) to Pole (A).

Secure Actuator mounting plate to the bracket welded on backside of Pole (E) with 2 Hex bolts M12x35 (#7), one Hex bolt M12x105mm (#5), 6 Flat washers M12 (#8), 3 Lock nuts M12 (#9). See Figure 6. Tighten all three nuts.

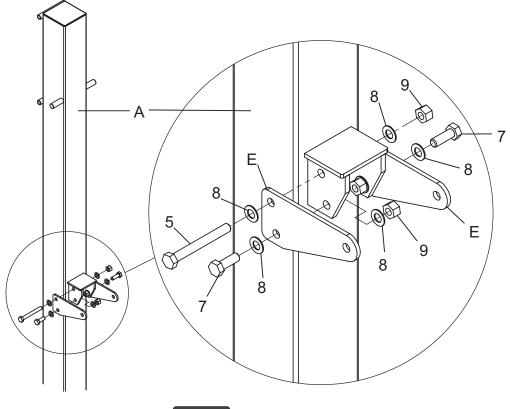

3. Attach Lower Extension arm (F) to Pole (A), as shown in Figure 7. Secure it with one Hex bolt M12x240 (#3), two Flat washers M12 (#8), two Plastic Washers M12 (#1), one Lock nut M12 (#9). See Figure 7.

Note: make sure Plastic washers go between Lower Extension and Pole.

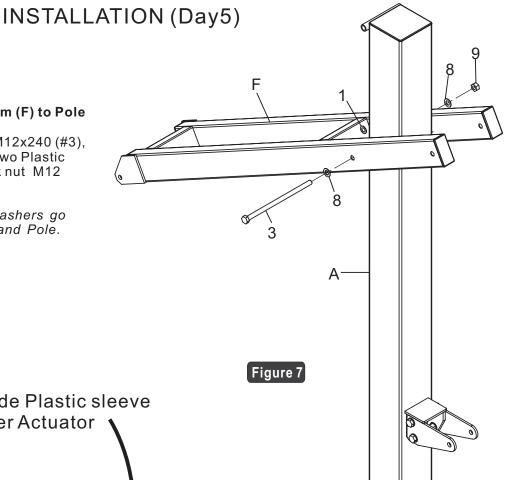

Slide Plastic sleeve over Actuator STEP 4 3 STEP 5 E 8 9 STEP 5

Attached Actuator (B) to Lower extension Arm (F).

Slide Actuator plastic sleeve (C) over top of Actuator (B), align the hole in the Plastic sleeve with the hole in the Actuator, slide one Steel Sleeve (#10) thru both parts, see Figure 8. Hold the Actuator assembly, align Steel Sleeve with the Rear hole of Lower extension Arm (F), Attached them together with one Hex bolt M12x240 (#3), two Flat washers M12 (#8), and one Lock nut M12 (#9).

5. Attached Actuator (B) to Actuator mounting plate (E). See Figure 8


Move Actuator between two Mounting plate (E), secure them together with one Hex bolt M12x105 (#5), two Flat washer M12 (#8), two Plastic washers M12 (#1), and one Lock nut (#9).

Do not over tighten this bolt.

Note: make sure Plastic washers go between Mounting plate (E) and Actuator (B). It prevents painted parts from being scratched.

Attach Crank (L) to the bottom of Actuator with supplied Lock pin.

Figure 8

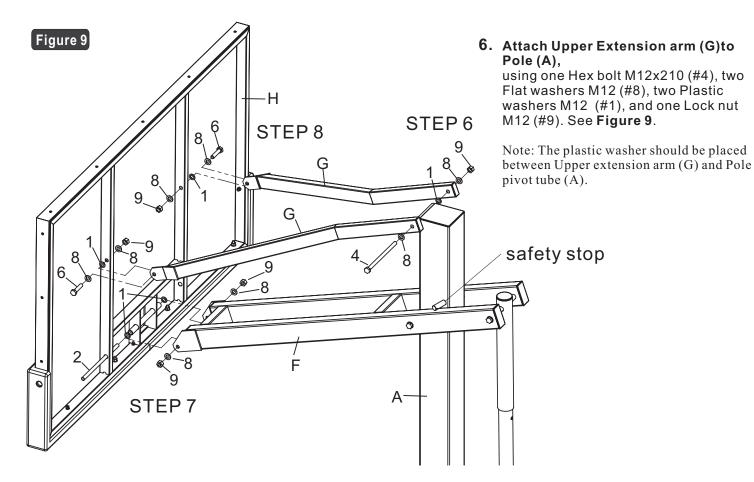

7. Attach Backboard (H) to Lower Extension arm (F).

Turn crank to lower support frame (F) until against safety stop.

With 3 capable adults, raise the Backboard assembly up and connect Lower Extension arm (F) to the Backboard Bracket using one Stud M12x265 (#2), 2 washers M12 (#8), 2 Plastic washers M12 (#1), and 2 Lock nuts M12 (#9).

Tighten this bolt snugly. See Figure 9.

Note:


- 1. Slide the Stud thru from outside of Vertical tubes. After the stud is installed, plug end caps into the holes on the vertical frame, to keep bees from holes. 4pcs plugs can be found in the hardware pack or manual pack.
- 2. The plastic washer goes between backboard bracket (H)

8. Attach Backboard (H) to Upper Extension arm (G).

Connect Upper board arm (G) to the Backboard edge using 2 Hex bolts M12x55 (#6), 4 Flat washers M12 (#8), 2 Plastic washers M12 (#1), and two Lock nuts M12 (#9).

Tighten the two bolts and nuts snugly.

See Figure 9.

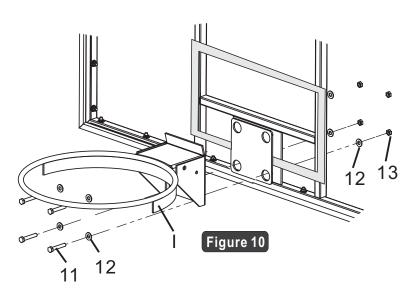

9. Attach Goal (I) to Backboard (H).

Remove the Rim box cover, put Goal against Rim pad (Pre-installed), secure it with 4 Hex bolts M10x55 (#11), 8 Flat washers M10 (#12), 4 Flange nuts M10 (#13) See Figure 10.

Tighten all four bolts and nuts.

Put Rim box cover back and secure it with removed screws.

Apply Rim Height Sticker

Use a tape measure to crank rim up to exactly 10' from playing surface. Make a line mark on the Actuator (B) against bottom edge of Actuator Sleeve (C).

Crank the rim all the way down to the extreme end. Peel and apply Rim Height sticker to outside of Actuator (B) lining up the mark with the 10' mark on the Rim Height Sticker.

See Detail B.

